


## jack

### instructions for use

1. Remove baseplate from connecting pillar.
2. Conduct mains cable through the baseplate.
3. The baseplate has to be screwed on a foundation with the included fixing material; where necessary prepare a drainage system. Ensure a secure position and flushness with FFL (finished floor level).
4. Inside plate with preassembled sockets has to be unscrewed and removed.
5. Screw connecting pillar onto baseplate.
6. Connect underground cable by cable connector with socket cable. Ensure tight seal of the PG fitting.
7. Fix inside plate with screws again. Avoid pinched cables.

**installation:** connection terminal 5 x 1,5 m<sup>2</sup>; possibility of through wiring with Y-connector inside pillar

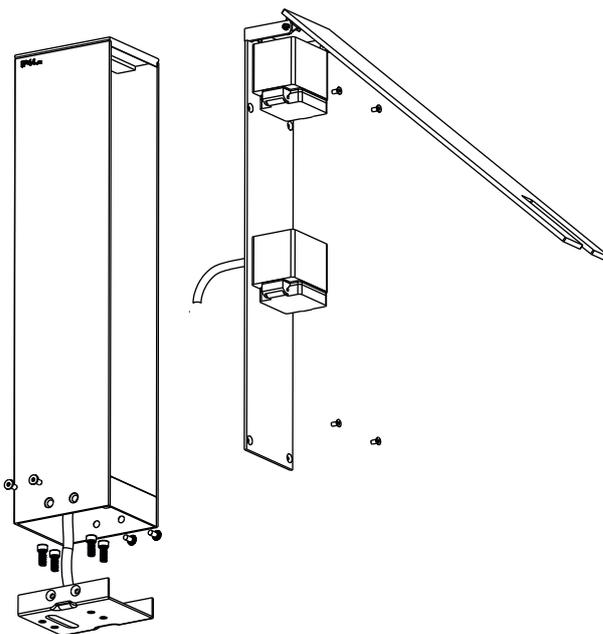

### technical information:

operating voltage 230V / 50Hz



protection class



safety class 1



Luminaire is suitable for mounting on normal inflammable fixing surfaces.



conformity mark

### care:

Regularly clean connecting pillar from dirt and deposits. Do not use a high pressure cleaner for cleaning.

Please note care instructions at [www.IP44.de](http://www.IP44.de).

### safety:

We point out that the electric connection of external sockets has to be done by a certified installer.

We assume no accountability for damages which are a result of non-appropriate mounting or application of the external socket. Modifications on the external socket will result in loss of warranty.

**note:** Moist concrete may be highly alkaline and must not contact the material permanently! Therefore we recommend to provide a sufficient drainage in the installation area and to apply the foundation with a special base-coating.